 





QUICK USER'S GUIDE

EN

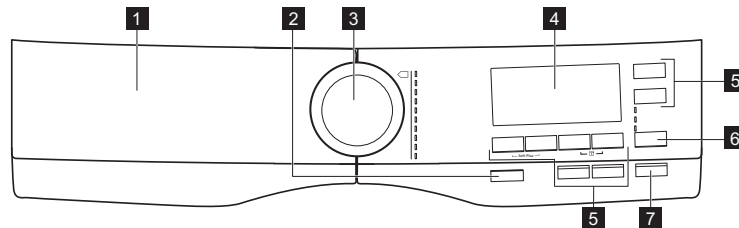

- 1 Detergent dispenser
- 2 On/Off button
- 3 Programme knob
- 4 Display

- 5 Options buttons
- 6 Skip phase button
- 7 Start/Pause button








-  Before you activate the appliance read the Safety Information chapter in the User Manual.
-  Before you activate the appliance remove all the transit bolts.
-  For more information please always refer to the User Manual.


THE ON/OFF BUTTON

The On/Off function automatically deactivates the appliance to stop energy consumption:

- Before touching Start/Pause button, if not using the appliance for about five minutes. All settings are cancelled. Press On/Off button to activate it again.
- After five minutes from the end of the programme. Once activated the appliance again, the display shows the cycle end.


THE DETERGENT DISPENSER

-  Compartment for prewash and soak phase.
-  Compartment for wash phase.
-  Compartment for liquid additives.
-  Compartment for stain remover.
-  Flap for powder  (position up) or liquid detergent  (position down).

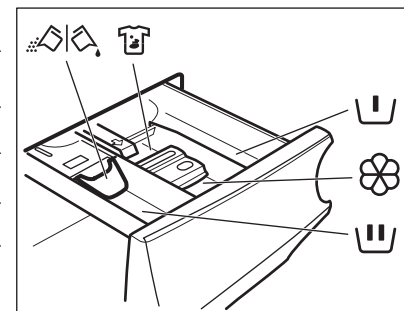

AEG

INTERACTIVE DISPLAY

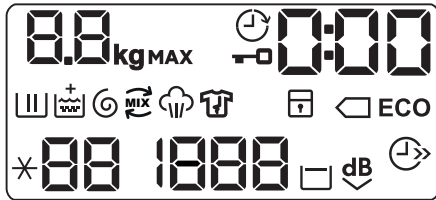

8.8 kg	Maximum load indicator
MAX	Maximum laundry indicator, it flashes in case of overloading.
	Door lock indicator and child lock indicator
	Delay start indicator
0:00	This area can show: the programme duration (e.g. 2:40), the delay time (e.g. 2h), the cycle end () , the warning code (e.g. E20) Phase indicators:
	Washing
	Soft Plus
	Antcrease
	OKO-MIX (if available)
	Rinse
	Spin
	Steam
	Energy saving indicators. appears if selecting a cotton programme at 40°C or 60°C.
	Time save indicator
1888	Spin speed indicator
	Rinse Hold indicator and Extra Silent indicator
88	Temperature indicator and Cold wash indicator

THE PROSENSE LOAD DETECTION

After the programme start and before the water filling, the appliance estimates the laundry amount in 30 seconds. The **kg** and indicators flash. After load estimation, the programme duration is updated accordingly on the display.

If the drum is overloaded, the display shows the maximum load and **MAX** flashes. In this case, for further 30 seconds it is possible to pause the appliance and remove a few garments.

If the laundry amount is not reduced, the appliance starts the washing programme immediately despite the overload (for more information see the User manual).

ALARM CODES

The display can show alarm codes (refer to the “Troubleshooting” table in the user manual):

E10: The appliance does not fill water properly.

E20: The appliance does not drain the water.

E40: The appliance door is open or not closed correctly.

EFO: The anti-flood device is on. Disconnect the appliance and close the water tap. Contact the Authorised service centre.

START THE APPLIANCE

DAILY USE

1. Open the water tap and connect the mains plug to the mains socket.
2. Press On/Off button to activate the appliance.
3. Put the laundry in the drum, one item at a time. Make sure that no laundry stays between the seal and the door.
4. Close the door and put the detergent and additives in the correct compartment of the dispenser.
5. Turn the programme knob to set a programme. The corresponding indicator comes on.

E.g. Synthetic programme at 40°C, 1200 rpm, 4 kg

6. The display shows the maximum declared load, the default temperature, the maximum spin speed, the washing phase indicators (when available) and the programme duration. To change the temperature and/or the spin speed or to add the available options touch the related buttons.
7. If necessary, set the delay start function. Keep touching the Delay Start button until the display shows the desired delay time.
8. Touch Start/Pause button to start the programme. The ProSense function starts the load estimation. If you have set the Delay Start, the appliance starts the countdown.



During the programme, the appliance can adjust the duration, depending on the water absorption of the fabrics.



9. At the end of the programme the appliance stops automatically. In the display all washing phase indicators become steady and the time area shows a steady . The indicator of the Start/Pause button and the door lock indicator goes off. The door unlocks.

If you have set the Rinse Hold or Extra Silent option, refer to 'At the end of the programme' chapter in the User Manual.

10. Remove the laundry from the appliance. Make sure that the drum is empty. Keep the door and the detergent dispenser slightly ajar to prevent mildew and odours.
11. Unplug the appliance and close the water tap.

AFTER PROGRAMME START


If it is necessary to interrupt a programme, touch Start/Pause button and wait for the door unlock. Touch it again to restart the programme.

If it is necessary to cancel a running programme, press the On/Off button to deactivate the appliance. The selection is cancelled.

CARE AND CLEANING



Clean the appliance filter regularly. Refer to 'Care and Cleaning' chapter in the user manual.

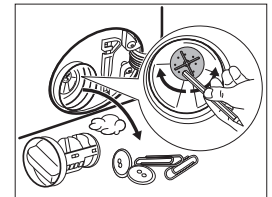

PROGRAMMES

Programme	Temperature range	Type of load
Washing programmes		
Cottons	95 °C - Cold	White cotton and coloured cotton with normal soil.
Synthetics	60 °C - Cold	Synthetic items or mixed fabric items with normal soil.
Delicates	40 °C - Cold	Delicate fabrics such as acrylics, viscose, polyester items with normal soil.
Wool/Silk	40 °C - Cold	Machine washable wool, hand washable wool and delicate.
Steam programme		
Steam	-	Steam programme for cotton and synthetic items.
Washing programmes		
Anti-allergy	60 °C	White cotton items. This programme helps to remove germs and bacteria.
20 Min. 3 kg	40 °C - 30 °C	Cotton and synthetic items lightly soiled or once worn.
Outdoor	40 °C - Cold	Modern sports clothes such as gym, cycling, jogging and similar items.
Duvet	60 °C - 30 °C	Single synthetic blanket, padded clothes, duvets, down jackets.
Jeans	60 °C - Cold	Denim clothing and jersey items with normal soil.